


Cornice Installation with Wood Mounting Strip


Mark Cornice Location

- Hold the cornice on the wall where you want it to be installed
- Use a level to insure it is level
- Use a pencil to lightly mark lines at the top and ends of the cornice on the wall where the cornice will be mounted. These marks will be reference points for attaching the mounting strip

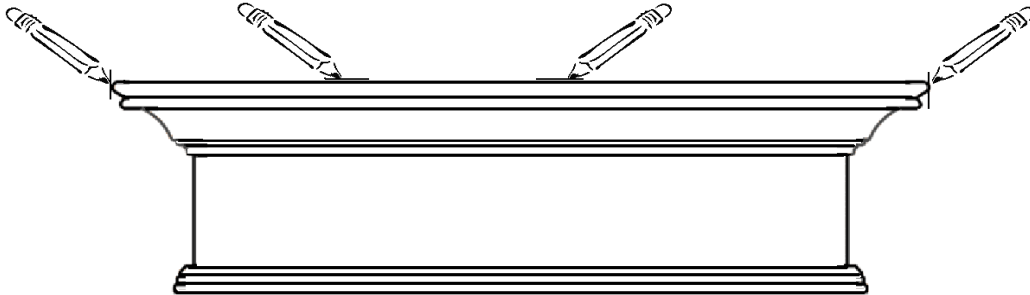

Attach the Wood Mounting Strip

- Use a stud finder to locate wall studs between the two cornice end marks. Use a pencil to lightly mark stud locations.
- Position the top of the wood mounting strip $\frac{3}{4}$ " below the top marks to account for the thickness of the top of the cornice.

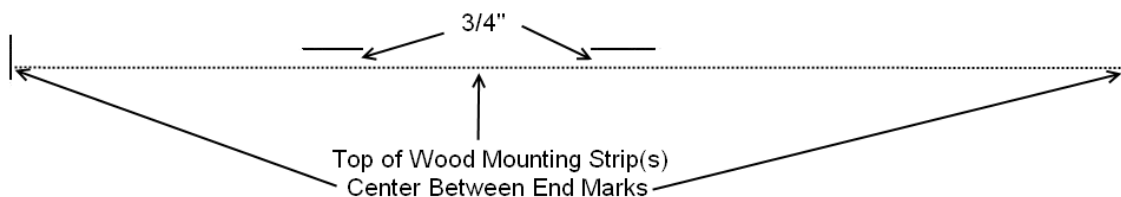

- Mark on the mounting strip where the studs are located.
- Drill $\frac{1}{4}$ " holes through the mounting strip at the marked stud location(s)
- Attach the mounting strip to the wall in position using the screws provided

Install the Cornice

- Mark screw locations on the top of the cornice and drill $\frac{3}{16}$ " pilot holes $\frac{1}{2}$ " from the back edge
- Place the cornice on the top of the wood mounting strip. Align the outside edges of the cornice with the marks on the wall and drive in screws through the pilot holes

